

Advance Technical Data

ACCELERATOR 400

Epoxy Curing Promoter for use with JEFFAMINE[®] Curing Agents

Accelerator 400 is a superior epoxy curing promoter designed for use with amine hardeners. The product was developed specifically for use with JEFFAMINE[®] curing agents, but it is compatible with most amines and may be used in most amine-cured epoxy systems.

PROPOSED SALES SPECIFICATIONS

<u>Property</u>	<u>Specifications</u>	<u>Test Method*</u>
Appearance	Clear, pale yellow, slightly viscous liquid free of suspended matter	ST-30.1
Color, Pt-Co	200 max.	ST-30.12
Water, wt%	0.4 max.	ST-31.53, 6

*Methods of Test are available from Huntsman Corporation upon request.

ADDITIONAL INFORMATION

Regulatory Information

See SDS for all regulatory information.

Typical Properties

AHEW (Amine hydrogen equivalent wt.)	145
Flash point, PMCC, °C (°F)	90 (194)
Freeze point, °C (°F)	-5.4 (22.3)
Density, lb/US gallon, 25°C (77°F)	9.10
Specific Gravity, 25/25°C	1.09
pH, 5% aqueous	10.9
Viscosity, kinematic, cSt	
15.6°C (60°F)	1830
25°C (77°F)	811
37.8°C (100°F)	301
65.6°C (150°F)	58

AVAILABILITY

Small evaluation samples can be obtained in North America by contacting our sample department at 800-662-0924.

TOXICITY AND SAFETY


For information on the toxicity and safe handling of this product, consult the Safety Data Sheet prior to use of the product.

PERFORMANCE DATA

Reactivity

Gel time data presented in Figures 1-3 were obtained using a standard DGEBA resin (EEW = 187) with JEFFAMINE® D-230 amine hardener using a 200-gram mass at a one-to-one amine hydrogen to epoxide stoichiometry.

Figure 1

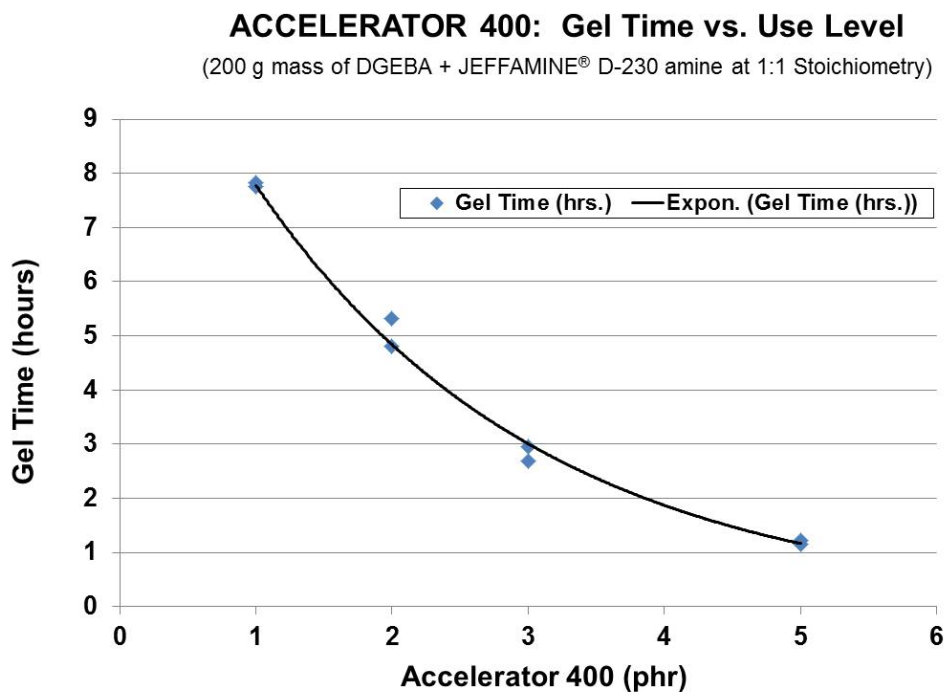


It is evident from Figure 1 that using accelerator levels greater than five phr provides incrementally less reduction of the gel time.

Figure 2 illustrates how maximum exotherm temperatures increase as gel times decrease from addition of greater amounts of accelerator.

Figure 2

ACCELERATOR 400: Max. Exotherm Temp. vs. Gel Time

(200 g mass of DGEBA + JEFFAMINE® D-230 amine at 1:1 Stoichiometry)

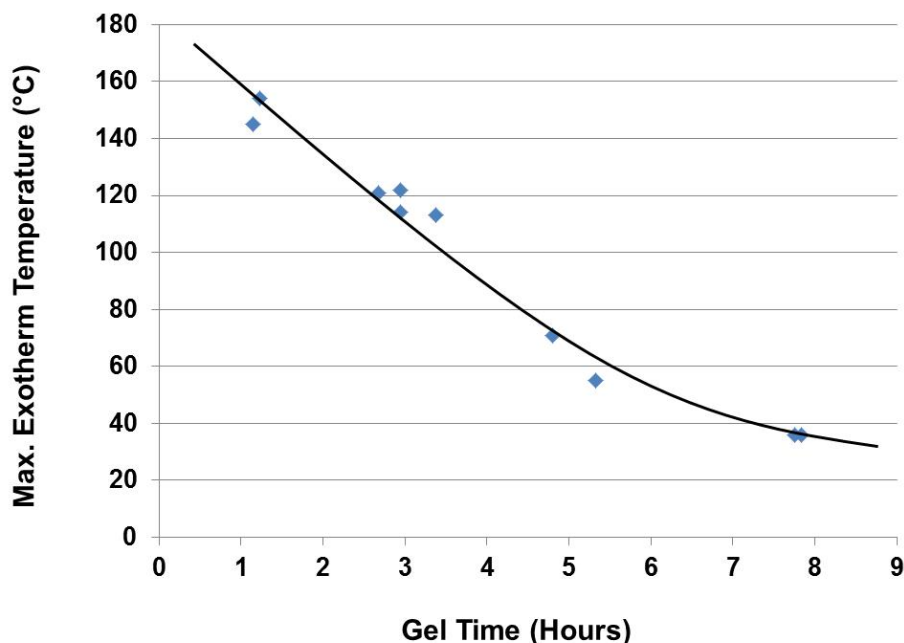

Mechanical and Thermal Properties

For verification that Accelerator 400 would provide equivalent mechanical performance when used in place of Accelerator 399, castings of a standard DGEBA type resin and JEFFAMINE® D-230 amine were prepared using 5 phr of each accelerator at a one-to-one stoichiometry of amine hydrogen to epoxide. Castings were cured at an elevated temperature: 3 hours at 80°C + 2 hours at 125°C. As shown in Table 1, no significant differences were observed in mechanical properties.

Property	Accelerator 400, 5 phr	Accelerator 399, 5 phr
Glass Transition Temperature (T _g), °C	83.7	82.1
Tensile strength, psi (MPa)	10,130 (69.84)	9,990 (68.88)
Tensile modulus, psi (GPa)	419,400 (2.891)	420,200 (2.897)
Elongation at break, %	4.43	4.38
Flexural strength, psi (MPa)	15,670 (108.0)	15,740 (108.5)
Flexural modulus, psi (GPa)	447,300 (3.084)	446,200 (3.076)

Calculation of Stoichiometry

Although some users may continue to formulate epoxy systems with minimal regard of stoichiometry, close attention to this detail is important to best assure the long-term performance of the cured epoxy resin. Adhering to a one-to-stoichiometry can often provide assurance that levels of either residual epoxide or amine groups are minimized. In systems that are either off-stoichiometry or under-cured (incompletely polymerized), maximum glass transition temperatures will not be reached, hardness may suffer, and residual groups may react with the environment over time (typically water, carbon dioxide, or oxygen) creating changes in properties.

The amine hydrogen equivalent weight (AHEW) of any blend of amine hardener and Accelerator 400 may be calculated as follows:

$$\text{AHEW of amine hardener} + \text{Accelerator 400} = \frac{\text{Grams of amine hardener} + \text{Grams of Accelerator 400}}{\frac{\text{Grams of amine hardener}}{\text{AHEW of hardener}} + \frac{\text{Grams of Accelerator 400}}{145}}$$

Since formulation of epoxy resins with reactive accelerators continues to be done using phr (parts per hundred of resin) values, formulators may find it convenient to choose their best estimate of accelerator usage in phr and then calculate the amount of amine hardener needed to attain a one-to-one stoichiometric ratio. This may be done as follows, based on a resin quantity of 100 grams:


$$\text{Grams of amine hardener to use in the blend with Accelerator 400} = \left\{ \frac{100 \text{ grams of epoxy resin}}{\text{EEW of the epoxy resin}} - \frac{\text{phr of Accelerator 400}}{145} \right\} \times \text{AHEW of the amine}$$

Use in Epoxy Formulations

Accelerator 400 is typically used by incorporating it into the amine side of a two-part formulation at levels up to 5 phr (parts per hundred of epoxy resin). Use of higher levels can further shorten gel times though with diminishing returns, as previously noted. Accelerator 400 not only accelerates curing but can lead to a higher degree of polymerization in some systems due to the plasticizing effect of some of its components. With lower T_g capable amine hardeners, or in plasticized formulations, use of Accelerator 400 may allow ambient temperature curing in flooring, floor coatings, and potting applications.

Figure 3 shows viscosity vs. time results for Accelerator 400 used at levels of 1, 2, 3, & 5 phr. The vertical or near-vertical portions of the plotted lines indicate gelation or its incipient onset. The slight differences seen in some of the plot pairs are insignificant. Accelerator 400 is a drop-in replacement for Accelerator 399.

Figure 3

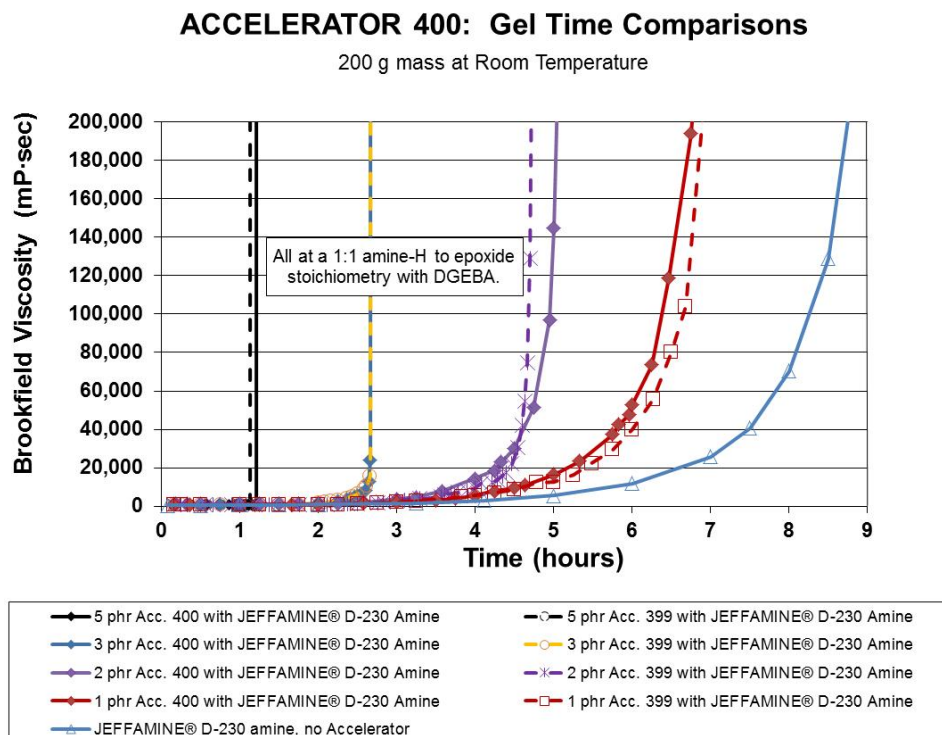

Note: Accelerator 400 is an experimental/developmental product. Product specifications and properties are subject to change as development progresses.

5407-0416

Copyright © 2016 Huntsman Corporation or an affiliate thereof. All rights reserved.
JEFFAMINE is a registered trademark of Huntsman Corporation or an affiliate thereof in one or more, but not all countries.

Huntsman Corporation warrants only that its products meet the specifications stated in the sales contract. Typical properties, where stated, are to be considered as representative of current production and should not be treated as specifications. While all the information presented in this document is believed to be reliable and to represent the best available data on these products, HUNTSMAN MAKES NO WARRANTY OR GUARANTEE OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT OF ANY THIRD PARTY, OR WARRANTIES AS TO QUALITY OR CORRESPONDENCE WITH PRIOR DESCRIPTION OR SAMPLE, AND ANY USER OF PRODUCTS DESCRIBED HEREIN SHOULD CONDUCT A SUFFICIENT INVESTIGATION TO ESTABLISH THE SUITABILITY OF ANY PRODUCT FOR ITS INTENDED USE AND ASSUMES ALL RISK AND LIABILITY WHATSOEVER RESULTING FROM THE USE OF SUCH PRODUCT, WHETHER USED SINGLY OR IN COMBINATION WITH OTHER SUBSTANCES. Products may be toxic and require special precautions in handling. For all products described herein, the user should obtain detailed information on toxicity, together with proper shipping, handling, and storage procedures, and should comply with all applicable safety and environmental standards. The behavior, hazards and/or toxicity of the products referred to in this publication in manufacturing processes and their suitability in any given end-use environment are dependent upon various conditions such as chemical compatibility, temperature, and other variables, which may not be known to Huntsman. It is the sole responsibility of the user of such products to evaluate the manufacturing circumstances and the final products under actual end-use requirements and to adequately advise and warn future purchasers and users thereof.

Main Offices US: Huntsman Corporation / 10003 Woodloch Forest Drive / The Woodlands, Texas 77380 / 281-719-6000
Technical Service US: 8600 Gosling Road / The Woodlands, Texas 77381 / 281-719-7780

Main Offices Europe: Huntsman Belgium BVBA / Everslaan 45 / B-3078 Everberg, Belgium / 32-2 -758-9211
Technical Service Europe: Technical Services Representative / Everberg Office

Main Offices Asia Pacific: Huntsman Singapore PTE / 150 Beach Road #37-00 Gateway West / Singapore 189720 / 65 6297 3363
Technical Service Asia Pacific: Huntsman Chemistry R&D Center (Shanghai) Co. Ltd. / 479 Wen Jing Road, Min Hang Economic & Technological Development Zone / Shanghai 200245, P R China / 86-21-2403-7090